

VISIT US ON THE WEB
**YOU CAN FIND PROGRAMMING INSTRUCTIONS
AND CODES FOR ALL OF OUR REMOTE
CONTROLS, AS WELL AS INFORMATION ABOUT
OUR OTHER PRODUCTS ON OUR WEBSITE:**
www.uselectronics.com



© 2003 US Electronics, LLC.
All rights reserved
Part Number USE18220, version 2.0
02072003

1 BEFORE YOU BEGIN

Make sure to set your TV to channel 2, 3, or 4 as directed by your cable company.

This manual makes reference to "device keys." These are the CBL, TV, VCR, DVD, and AUD keys at the top of the remote control.

After you have programmed the remote, you'll use the device keys to select which device you want the remote control to operate.


2 INSTALL BATTERIES

Before you can program or operate the remote control, you must install two Alkaline AA batteries.

STEP 1: Remove the battery compartment cover on the back of your remote control.

STEP 2: Check battery polarity carefully, and install the batteries as shown in the illustration below.

STEP 3: Replace the battery compartment cover.

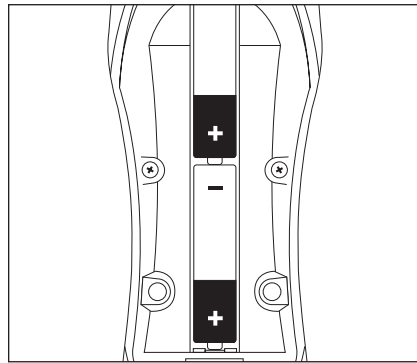


! IMPORTANT NOTE

Weak batteries may disrupt normal operation of the remote.

We recommend that you use only new Alkaline AA batteries.

3 KNOW YOUR REMOTE

THE DIAGRAM BELOW SHOWS THE FUNCTIONS OF SPECIAL KEYS FOR YOUR SET-TOP BOX AND PROGRAM GUIDE. US ELECTRONICS PROVIDES THESE FUNCTION DESCRIPTIONS AS A GENERAL GUIDE TO ALLOW YOU TO BECOME MORE FAMILIAR WITH YOUR SET-TOP BOX. REFER TO YOUR SET-TOP BOX MANUAL FOR DESCRIPTIONS OF SPECIFIC FUNCTIONS.

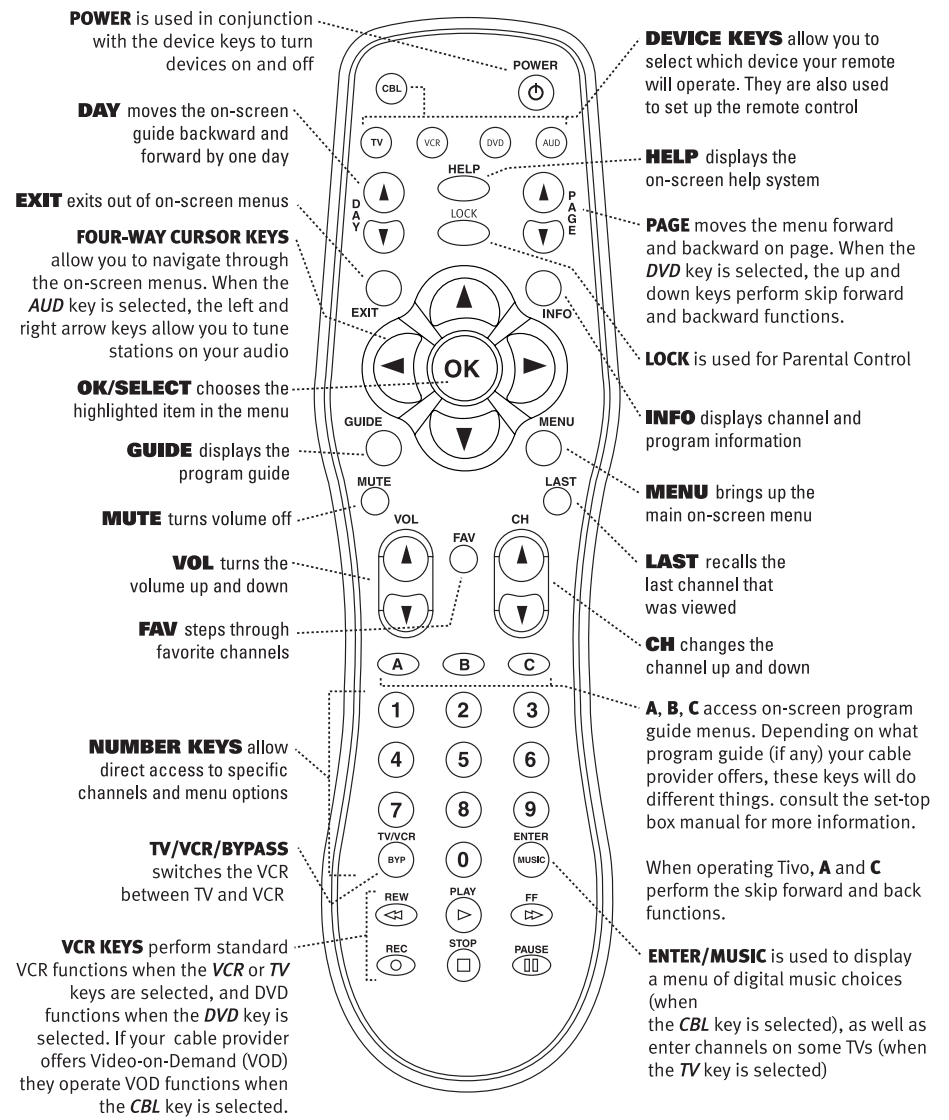

CHANNEL SURF: Press and hold the **OK** button for 3 seconds. The remote will automatically send 25 channel up/down signals (depending on which channel button was used last) in half-second intervals. If you see a channel that you want to watch, press any button on the remote to stop channel surfing.

4 SETTING UP YOUR REMOTE

To set up the Novari to operate a device, look for the list of manufacturers' three-digit codes for the device type in sections 10-16 of this manual (the code for your set-top box is 000), then perform the following steps.

NOTE:

if you are setting up the remote for a: follow these instructions as if it were a:
TV/VCR ComboVCR
TV/DVD ComboDVD player (please read section 16 before continuing)
Personal Video RecorderVCR

- 1 On the remote control, press and hold the appropriate device key until the five device keys flash twice. The selected device key will continue to flash.

- 2 Enter the three-digit code.

After you press the first digit, the device key should light and stay on. After you press the last digit, the device key should flash three times and turn off.

If the device key does not flash three times before turning off, the code is invalid for this device type. Repeat the procedure with another device code.

- 3 Point the remote at the device and press **POWER**. If the device turns on or off, you have finished programming.

If you have tried all the codes listed for the manufacturer and the device does not respond, refer to the SmartScan™ section later in this manual.

- 4 Write the codes below

Set-top Box code ___ ___ ___ TV code ___ ___ ___
VCR Code ___ ___ ___ DVD Code ___ ___ ___ Audio Code ___ ___ ___

5 PROGRAMMING VOLUME CONTROL

By default, the TV, CBL, or AUD keys will send their own volume and mute signals to their device. If you would like to set up the Novari so that volume is always controlled by a particular device (set-top box, TV, or audio amplifier), follow these steps:

- 1 Press and hold the CBL key for approximately three seconds until the five device keys flash twice. The CBL key will continue to flash.
- 2 Press **VOLUME UP** then **VOLUME DOWN** then the Device Key (TV, CBL, or AUD) of the device that you want to control volume and mute functions. After you release the Device Key, the CBL key will blink three times to confirm the procedure.

NOTE: volume will always be controlled by your audio device when the remote control is in **AUD** mode — regardless of how you set up volume control in this section.

6 MASTER POWER CONTROL

You can program your Novari to turn on and off all of your remote-controlled devices (TV, CABLE, VCR, DVD, AUDIO) when you press **POWER**. All devices must be in direct line of sight to ensure proper operation. Perform the following steps to enable or disable power control for each device:

- 1 Make sure all devices to be controlled are turned on.
- 2 Press and hold the CBL key for approximately three seconds until all five device keys flash twice. The CBL key will continue to flash.
- 3 Press **POWER** twice. The CBL key will flash three times and turn off.

7 CHANNEL LOCK

Channel Lock prevents the channel up and down functions from operating any device other than the set-top box — no matter which device (TV, CABLE, VCR, DVD, AUDIO) is currently selected.

The Novari comes with Channel Lock activated. If you want the remote control to operate channel functions on your TV or VCR you will need to de-activate Channel Lock. To deactivate Channel Lock, follow these steps:

- 1 Press and hold the CBL key for 3 seconds. The CBL key will continue to flash.
- 2 Press **CHANNEL UP**; press **CHANNEL DOWN**; then press **SELECT**. The CBL Key will blink three times to confirm the procedure.

Repeat these steps to re-activate Channel Lock.

8 SMARTSCAN™

If none of the codes listed for your device works, the SmartScan™ procedure will allow you to cycle through all the available codes in the remote until you find the right one.

- 1 Manually turn on power to the device for which you want to program the remote (TV, VCR, DVD, AUDIO).
- 2 Press and hold the appropriate device key for approximately three seconds until the five device keys flash twice. The selected device key will continue to flash. Press **POWER**. The device key will stop flashing and remain on.
- 3 Point the remote control at the device. Press and hold the **UP ARROW** key. Approximately once every second, the remote sends the power-off command using a different device code. When the device turns off, that means that the remote has reached a code that can control the device. Immediately release the **UP ARROW** key when the device turns off. If you accidentally press the **UP ARROW** key after the device has turned off, press the **DOWN ARROW** key to return to the previous device code.
- 4 Test whether other functions operate using the remote control. If a primary function does not work, continue to press the **UP ARROW** key to find another code that turns off the device. Then test the functions again. When you are satisfied that all primary functions are working, press **OK** to lock in the code.



9 RECALLING A DEVICE CODE

Perform the following steps to read the code currently set for a device. This is useful for retrieving a device code that was set using the SmartScan™ procedure.

- 1 Press and hold a device key until the five device keys flash twice. The selected device key will continue to flash.
- 2 Press **INFO**. The device key flashes each of the three digits in the code. A pause separates each digit. For example, three flashes represent the number 3, and a rapid flicker represents 0, so a code of 103 will be shown as: FLASH <pause> FLICKER <pause> FLASH FLASH FLASH
- 3 Count and record the sequence of flashes to determine the three-digit code.

